
2005 HYUNDAI GETZ (TB) G 1.3L SOCH
TABLE OF CONTENTS

ENGINE
ENGINE - MFI CONTROL SYSTEM 2
CHARGING SYSTEM 6
CHARGING SYSTEM 7
CHARGING SYSTEM 8
STARTING SYSTEM 9
STARTING SYSTEM 10
RESTRAINTS
AIRBAG SYSTEM (SRS) 11
POWER WINDOWS 12
POWER WINDOWS 13
POWER WINDOWS 14
TRACTION CONTROL SYSTEMS
ANTI-LOCK BRAKES 15
ANTI-LOCK BRAKES 16
RADIO, STEREO, AND COMPACT DISC
AUDIO 17
AUDIO 18
TRANSMISSION AND DRIVERTRAIN
AUTOMATIC TRANSAXLE CONTROL SYSTEM 19
AUTOMATIC TRANSAXLE CONTROL SYSTEM 20
ATM SOLENOID VALVE 21
TRANSAXLE RANGE SWITCH 22
VENTILATION, HEATER & AIR CONDITIONER
BLOWER & A/C CONTROLS (AUTO) 23
BLOWER & A/C CONTROLS (AUTO) 24
COOLING SYSTEM 25
DRIVER CONTROLS
CIGARETTE LIGHTER & POWER OUTLET 26
COURTESY & TRUNK LAMPS 27
COURTESY & TRUNK LAMPS 28
DRL (DAYTIME RUNNING LIGHT) 29
DRL (DAYTIME RUNNING LIGHT) 30
EXTERIOR LIGHTS BACKUP LAMPS CIRCUIT 31
FRONT FOG LAMPS AND REAR FOG LAMPS 32
FRONT FOG LAMPS AND REAR FOG LAMPS 33
HEAD LAMP LEVELING DEVICE 34
HEAD LAMPS 35
HORN 36
ILLUMINATIONS 37
ILLUMINATIONS 38
STOP LAMPS 39
TAIL, PARKING & LICENSE LAMPS 40
TURN & HAZARD LAMPS 41
TURN & HAZARD LAMPS 42
STEERING
ELECTRONIC POWER STEERING 43
WIPER AND WASHER SYSTEM
FRONT WIPER & WASHER 44
REAR WIPER & WASHER 46
MIRRORS
GLASS & MIRROR DEFOGGER 47
GLASS & MIRROR DEFOGGER 48
POWER OUTSIDE MIRROR 49
POWER AND GROUND DISTRIBUTION
FUSE & RELAY 50
GROUND DISTRIBUTION 54
PASSENGER COMPARTMENT 59
POWER DISTRIBUTION 63
SENSOR AND SWITCHES, CONNECTOR
CANISTER PURGE VALVE 69
ENGINE COOLANT TEMPERATURE SENSOR 70
FUEL SENDER & FUEL PUMP MOTOR 71
IDLE SPEED CONTROL ACTUATOR 72
INJECTOR 73
KNOCK SENSOR 74
MANIFOLD ABSOLUTE PRESSURE SENSOR 75
OIL TEMPERATURE SENSOR 76
OXYGEN SENSOR UP 77
PULSE GENERATOR 78
DATA LINK CONNECTOR 79
DATA LINK CONNECTOR 80
THROTTLE POSITION SENSOR 81
GLOSSARY
GLOSSARY OF TERMS 82
GLOSSARY OF TERMS 83

DIAGRAMAS

MENÚ PRINCIPAL

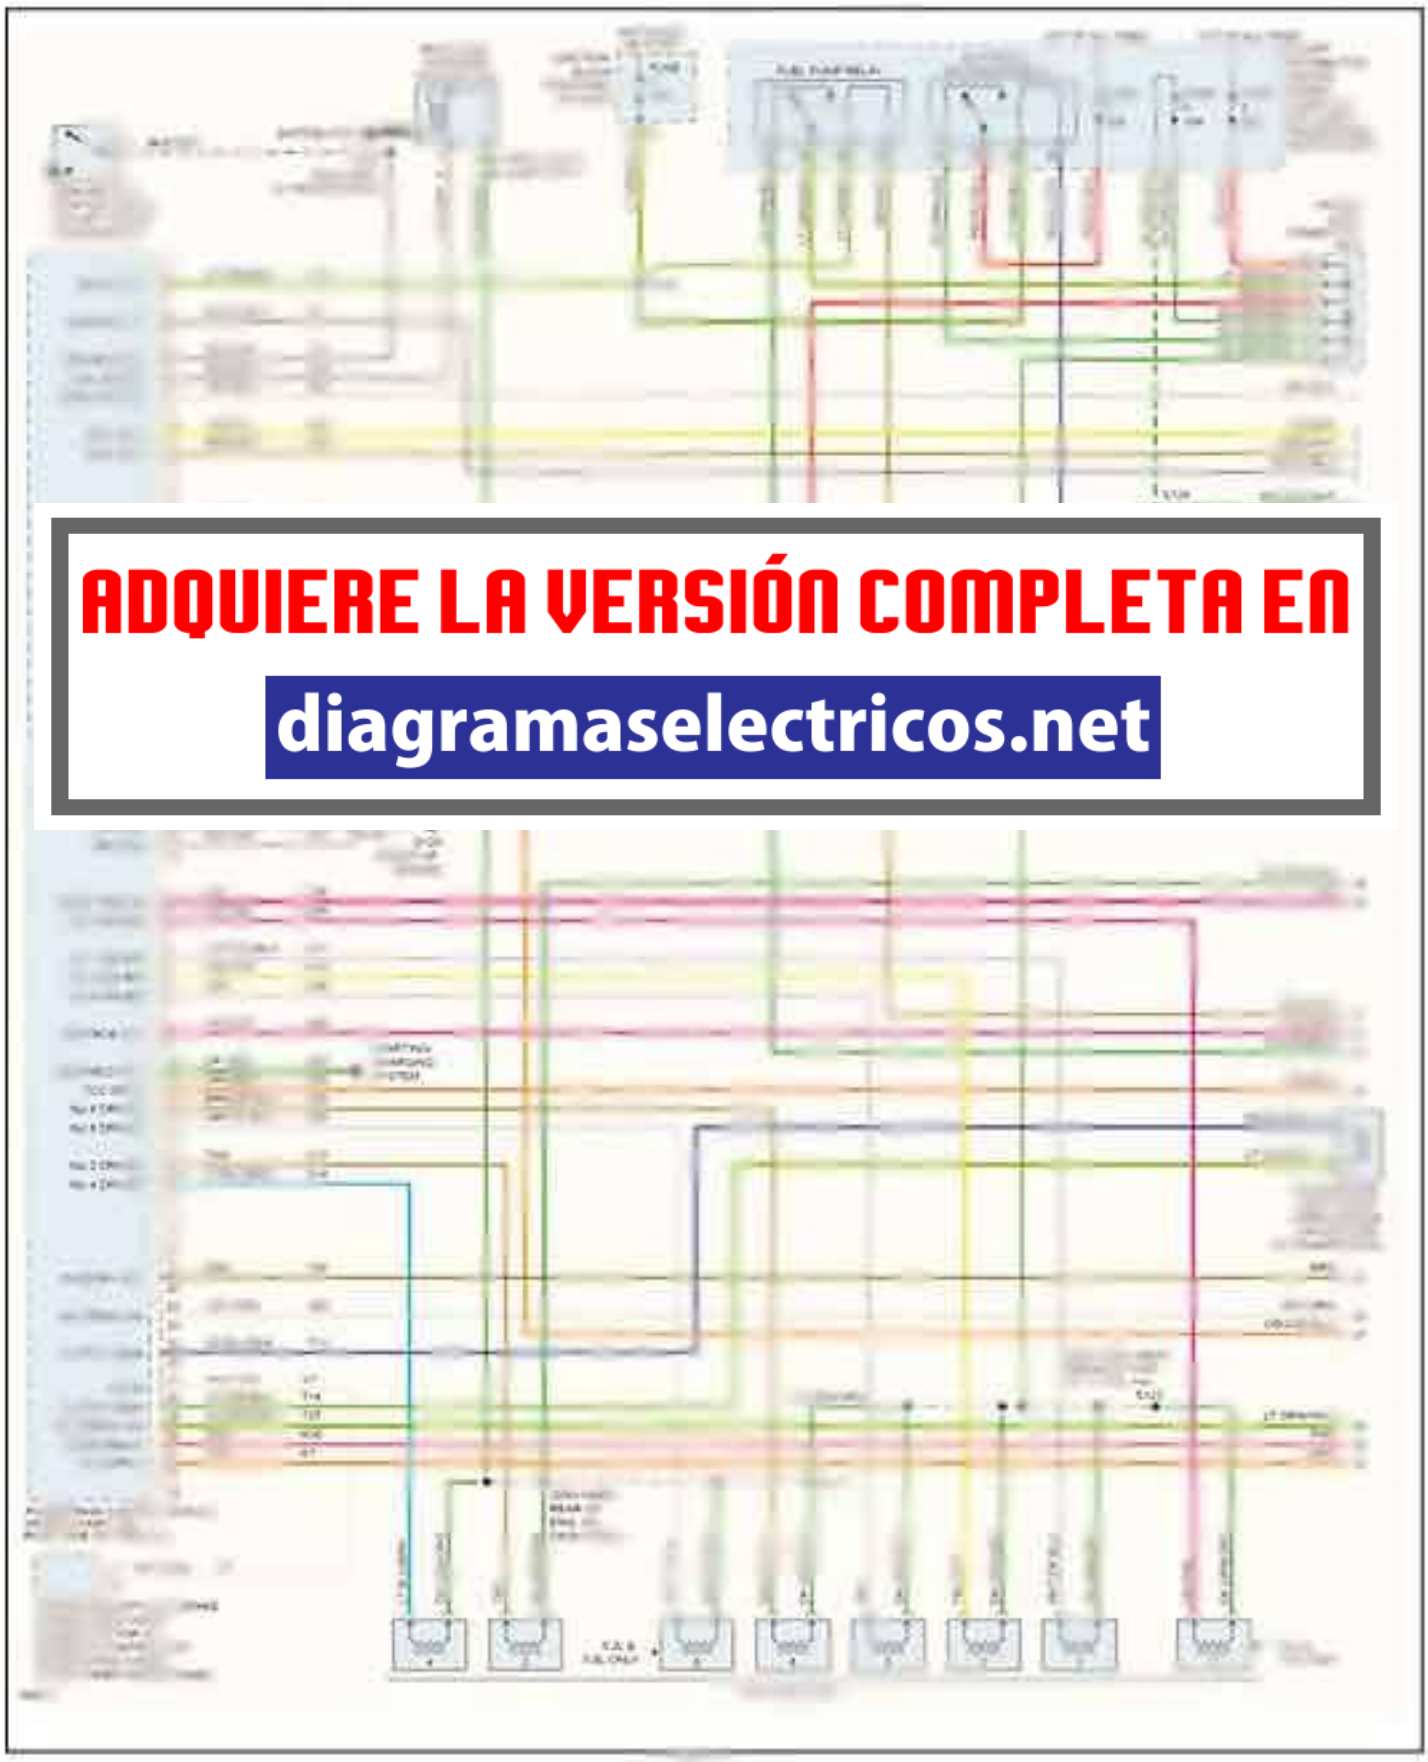

ADQUIERE LA VERSIÓN COMPLETA EN

diagramaselectricos.net